



total CONTROL

Universal Remote Control TV



Instruction Manual

English TOTAL CONTROL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase.

New Zealand 0800 1425569 sales@amber.co.nz www.amber.co.nz Australia 1 300 888 298 ofa.support@ambertech.com.au www.ambertech.com.au

Welcome

Congratulations on purchasing this universal TV Device remote control. You can now replace your lost or faulty remote.

Your TV Device remote

Note: Button use

Your universal TV Device remote will need to be programmed before use. Most of the buttons listed on the right will not be usable until it is programmed.

Batteries




Inserting the Batteries

- 1 Remove the black plastic battery cover from the back of the remote control by gently push and slide back the battery cover to open. 2 Insert two AAA batteries (not supplied) into your remote control - ensure that the positive (+) and negative (-) symbols on the batteries match the symbols inside the remote control unit. 3 Replace the battery cover, by sliding it into place until it clicks shut.

Note: Battery use

Use only new batteries of the required size and recommended type. Do not mix old and new batteries or rechargeable batteries of different capacities.

Button use

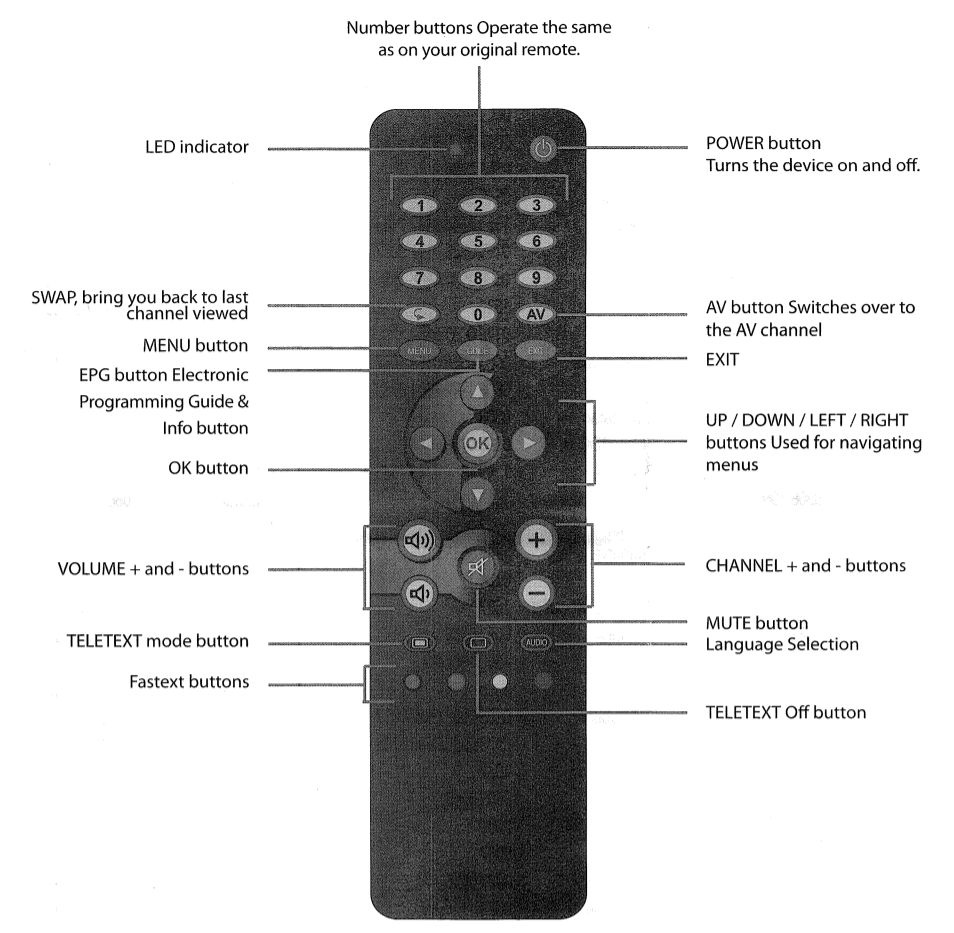

Programming your remote

Code Set up

- 1. Find the four-digit device code for your device (e.g. ACCENT television) in the Code list in the manual. Codes are listed by device type and brand name. The most popular code is listed first. If your brand is not listed at all please try the Code Search. Make sure your equipment is switched on. If not switch it on manually. 2. Press and hold the red & blue keys for 3 seconds. The red LED will light up twice. 3. Enter your four-digit device code using the number keys (e.g. TV - Accent code 0009). The red LED lights up twice. 4. Now, aim the remote control at your device and press POWER. If your device switches off, the remote control is ready to operate your device. If it does not switch off your device simply try the next code listed for your brand.

If none of the codes listed for your brand work please try to Code Search. The Code Search may also work if your brand is not listed at all.

Code Search

- 1. Switch on your television (not on standby) and aim your remote control at your TV. 2. Press and hold the red & blue keys for 3 seconds. The red LED will light up twice. 3. Aim the remote control at your device. Press and hold the "POWER KEY" until your device switches OFF (this may take up to 8 minutes). Release the "POWER key" as soon as your device switches OFF.

Brand code list

TV Television / HDTV / LCD / LED / Plasma / Projector

Table with columns for TV brand and code. Brands include Alba, Audioworld, Blue Sky, Cathay, D.Boss, DiK, Emerson, Force, GoldStar, etc. Codes are listed for each brand.