

# ABB i-bus® KNX

## Thermoelectric Valve Drive, 230 V

### TSA/K 230.2, 2CDG 120 049 R0011



#### Product Description

The Thermoelectric Valve Drive is used to open and close valves in Heating, Ventilating and Air-Conditioning (HVAC) systems.

The device can be controlled (2-point output or pulse width modulation) with the Electronic Switch Actuator ES/S, with the Valve Drive Actuator VAA/S or VAA/A or with the Electronic Relay ER/U in combination with the Universal Interface US/U and a Room Thermostat.

The snap-on mounting on valves or in heating circuit distributors will be established by Valve Adapters VA/Z.

# ABB i-bus® KNX

## Thermoelectric Valve Drive, 230 V

### TSA/K 230.2, 2CDG 120 049 R0011

#### Technical Data


<b>Version</b>	Normally Closed First-Open function	NC Enables heating operation during the carcass construction phase even when the electric wiring of the single room control is not yet complete.
<b>Power supply</b>	Operating Voltage Operating current Max. inrush current Operating power Over voltage protection according to EN 60730-1	230 V AC ± 10 %, 50/60 Hz 5 mA <550 mA during 100 ms max. 1 W At least 2.5 kV
<b>Connection</b>	Connection cable (pluggable) Length	2 x 0.75 mm <sup>2</sup> , light grey 1 m
<b>Operating and display elements</b>	Function display	Displays whether the valve is opened or closed
<b>Valve drive mechanic</b>	Actuator travel Actuator force Closing and opening times	4 mm 100 N ± 5% Approx. 3 min.
<b>Ambient temperature range</b>	Fluid Environment Storage	0 °C ... + 100 °C 0 °C ... + 60 °C - 25 °C ... + 60 °C
<b>Design</b>	Compact device for placing on valve bases	
<b>Housing</b>	Dimensions (H x W x D) Material Colour	60 x 44 x 49 mm Plastic Light grey, RAL 7035
<b>Mounting</b>	Snap-on mounting Installation positions	Via Valve Adapter VA/Z 360° (vertical and horizontal recommended)
<b>Type of protection</b>	IP 54 (in all installation positions)	According to DIN EN 60529
<b>Protection class</b>	II	According to DIN EN 61140
<b>Weight</b>	0.1 kg	
<b>CE-norm</b>	According to EN 60730	

#### Accessory

Type	Model
VA/Z 10.1	Valve Adapter (M 30 x 1.5) for Dumser, Chronatherm, Vescal, KaMo
VA/Z 50.1	Valve Adapter (M 30 x 1.5) for Honeywell, Reich, Cazzaniga, Landis & Gyr., MNG
VA/Z 78.1	Valve Adapter (Flange) for Danfoss RA
VA/Z 80.1	Valve Adapter (M 30 x 1.5) for Heimeier, Herb, Onda, Schlösser (from 93), Oventrop


# ABB i-bus® KNX Thermoelectric Valve Drive, 230 V TSA/K 230.2, 2CDG 120 049 R0011

## Circuit diagram

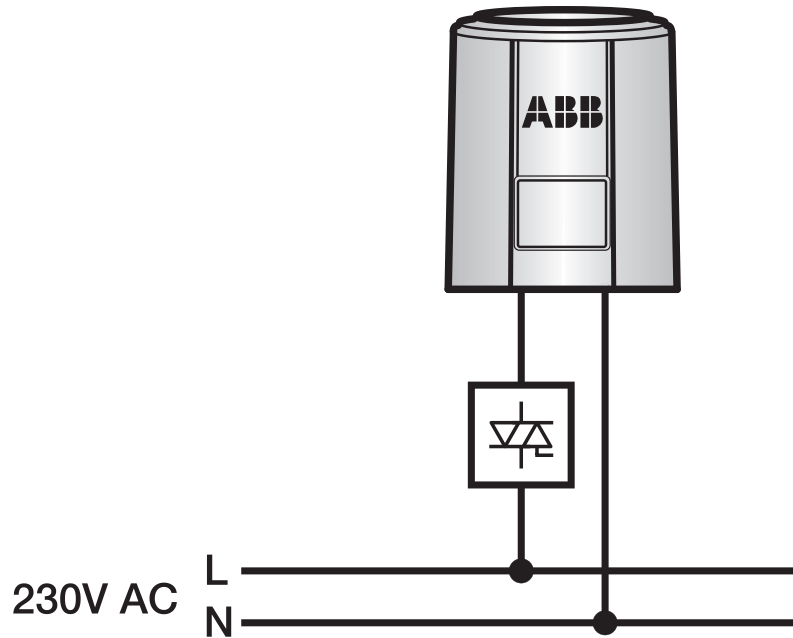


2CDC 072 006 F0015

## Dimension drawing

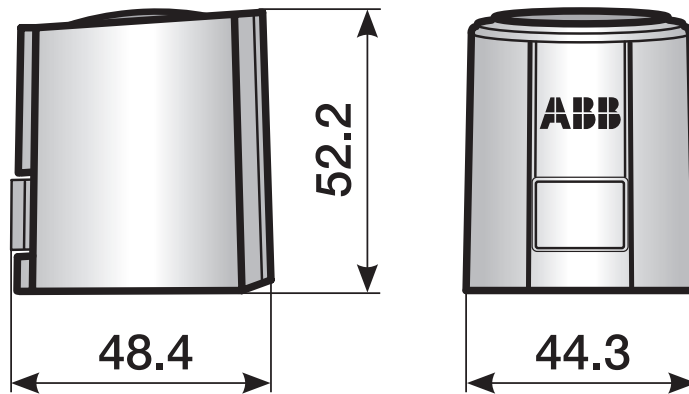

2CDC 072 004 F0015

## Dimension drawing installation height

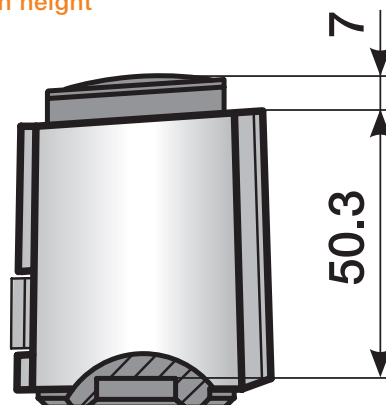


2CDC 072 007 F0015

# ABB i-bus® KNX

## Thermoelectric Valve Drive, 230 V

### TSA/K 230.2, 2CDG 120 049 R0011

#### Characteristic curves

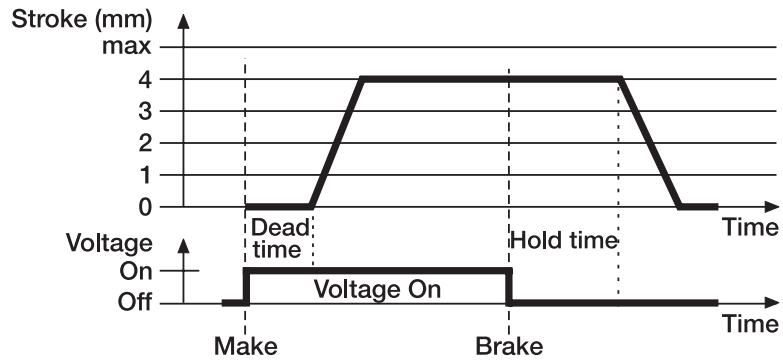

2CDC 072 329 F0205

#### Mounting and Installation

Generally all installation positions are possible for practical use. Preferred installation positions of the valve drive are vertical and horizontal. An upside-down position may reduce product life through special circumstances (e.g. contaminated water).

The valve adaptation occurs via the Valve Adapter VA/Z. Those are available for the most common valve bases and heating circuit distributors. See also **Accessory**.

In its delivery state the valve drive is normally open due to the First-Open function. This enables heating operation during the carcass construction phase even when the electric wiring of the single room control is not yet complete. When commissioning the system at a later date, the First-Open function is automatically unlocked by applying the operating voltage (> 6 min.) and the valve drive is fully operable.

We recommend the following wires for installation a 230 V system:

Light plastic-sheated cable: NYM	1.5 mm <sup>2</sup>
Flat webbed building wire: NYIF	1.5 mm <sup>2</sup>

# ABB i-bus® KNX

## Thermoelectric Valve Drive, 230 V

### TSA/K 230.2, 2CDG 120 049 R0011

Important notes
Installation and commissioning of the device may only be carried out by trained electricians. The relevant standards, directives, regulations and instructions must be observed when planning and implementing the electrical installation.
Protect the device against moisture, dirt and damage during transport, storage and operation!
Do not operate the device outside the specified technical data (e.g. Temperature range)!

#### Cleaning

Should the device become soiled, it may be cleaned with a dry cloth. If this does not suffice, a cloth lightly moistened with soap solution may be used.

On no account should caustic agents or solvents be used.

#### Maintenance

The device is maintenance free. Should damage have occurred, e.g. due to transport or storage, no repairs should be carried out.

The warranty expires if the device is opened!

# Contact

## **ABB STOTZ-KONTAKT GmbH**

Eppelheimer Straße 82

69123 Heidelberg, Germany

Telefon: +49 (0)6221 701 607

Telefax: +49 (0)6221 701 724

E-Mail: [knx.marketing@de.abb.com](mailto:knx.marketing@de.abb.com)

## **Further Information and Local Contacts:**

[www.abb.com/knx](http://www.abb.com/knx)

## **Note:**

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail.

ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of this contents - in whole or in parts - is forbidden without prior written consent of ABB AG.

Copyright© 2015 ABB

All rights reserved